

Installation instructions for

VBASE

VISAM Automation Base

based on VBASE HMI/SCADA Version 10 or later

Welcome, and thank you for installing VBASE HMI / SCADA!

This manual will guide you through the installation process and will show how to set your VBASE Editor's language to English and make a first online update. If you still need help, please contact our support team.

- ➔ VBASE HMI/SCADA is available as a free download at www.visam.com/download.php
The software is fully functional, online testing is available for 1 hour.


Step One: VBASE HMI / SCADA installation

If you downloaded VBASE HMI / SCADA from our website, please launch the downloaded msi installer file. (eg. VBASE_10_Setup.msi)
If you want to install from CD-ROM, the following screen should appear automatically when you insert the disc. If not, navigate to the root directory of your cd drive and launch the file „start.exe“.




Click „VBASE auf diesem Computer installieren“ to start the installation process.


An English first step manual for working with VBASE HMI / SCADA can be found here.

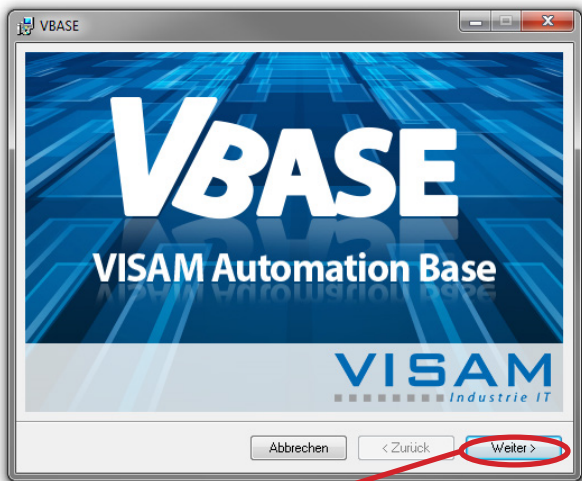


Click next to proceed.

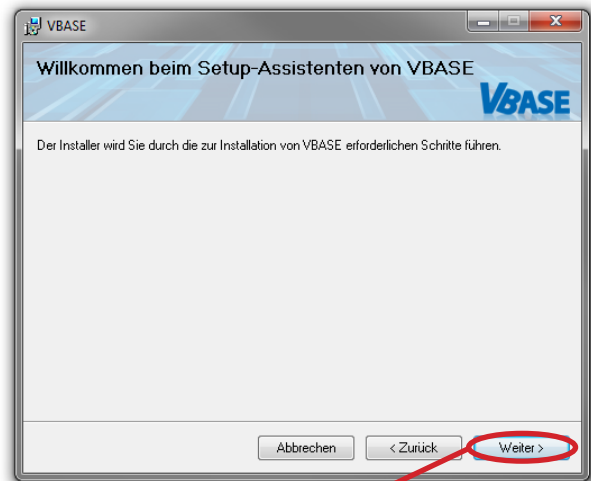


Again, click next to proceed.

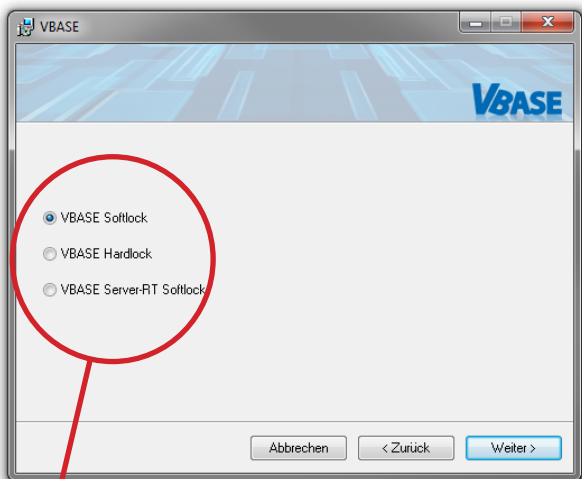


Choose the type of installation. Choose "VBASE Softlock" for demonstration purposes.

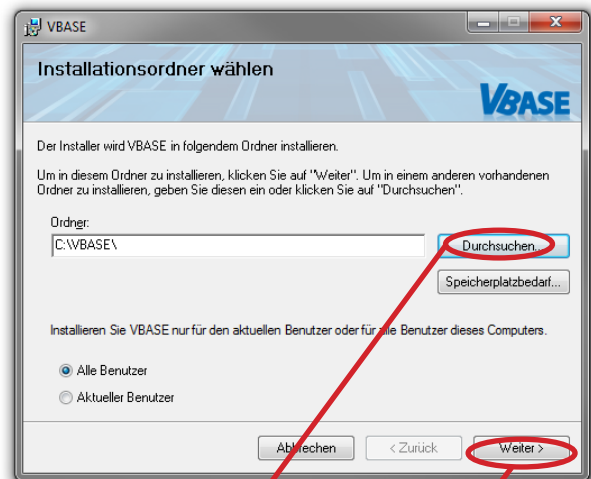

Choose the installation folder and click next to proceed.

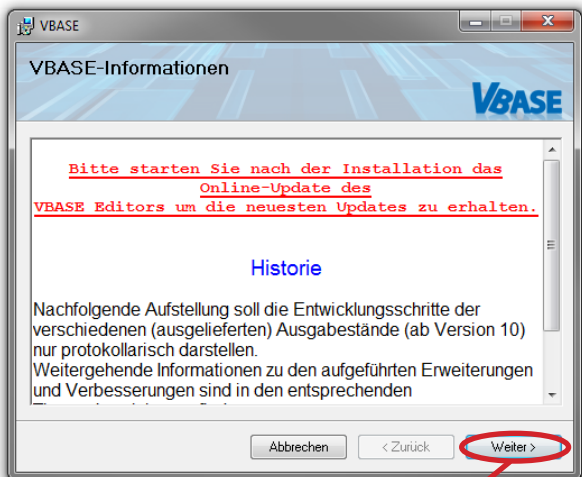


Please start online-update after your first launch of the VBASE Editor. Click next to proceed.

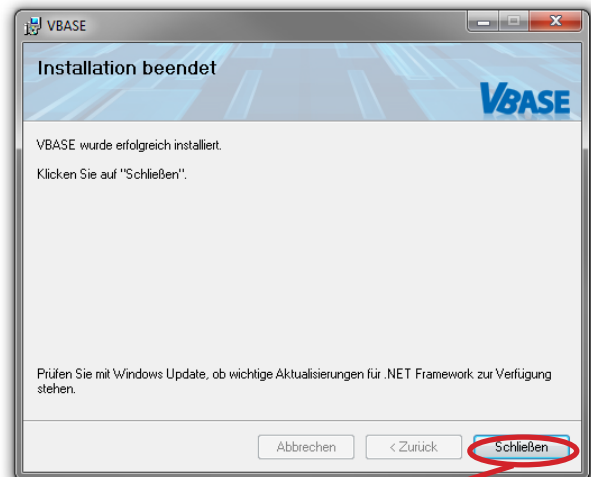


Installation successfully. Click close to finish. You're ready to go.

Step Two: Set VBASE Editor language to English

The default language of the VBASE Editor is German. If you want to set the language to English, please launch the VBASE Editor and follow the instructions.

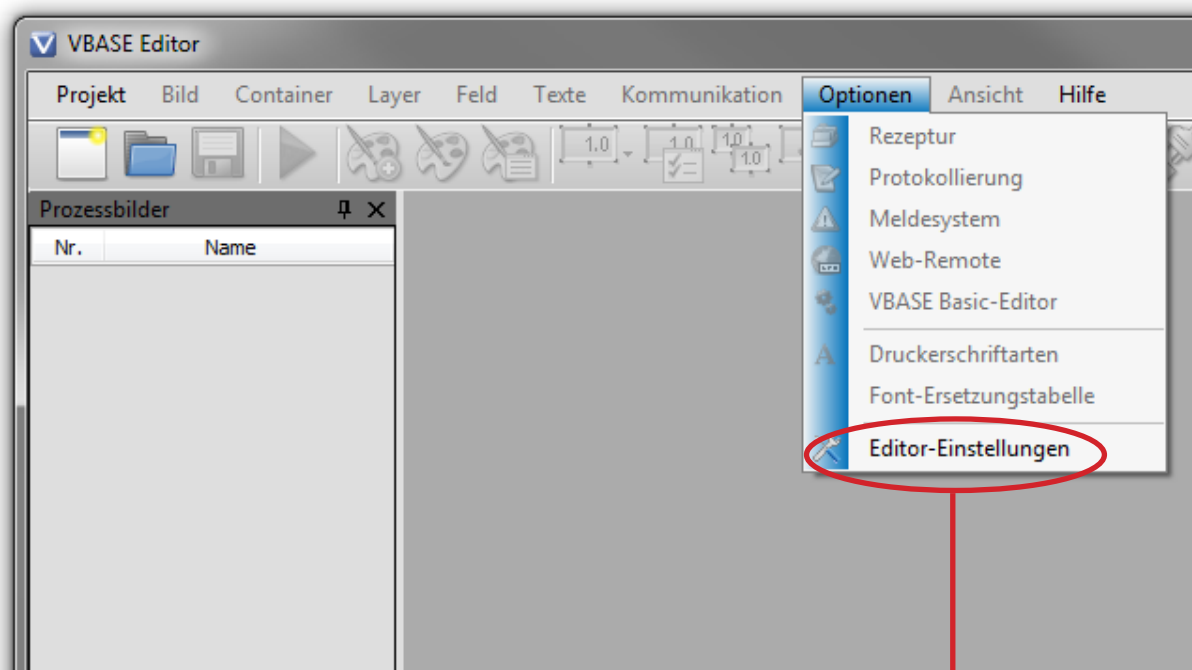

Navigate to „Optionen“ >> „Editor-Einstellungen“ through the menu bar at the top of the window.

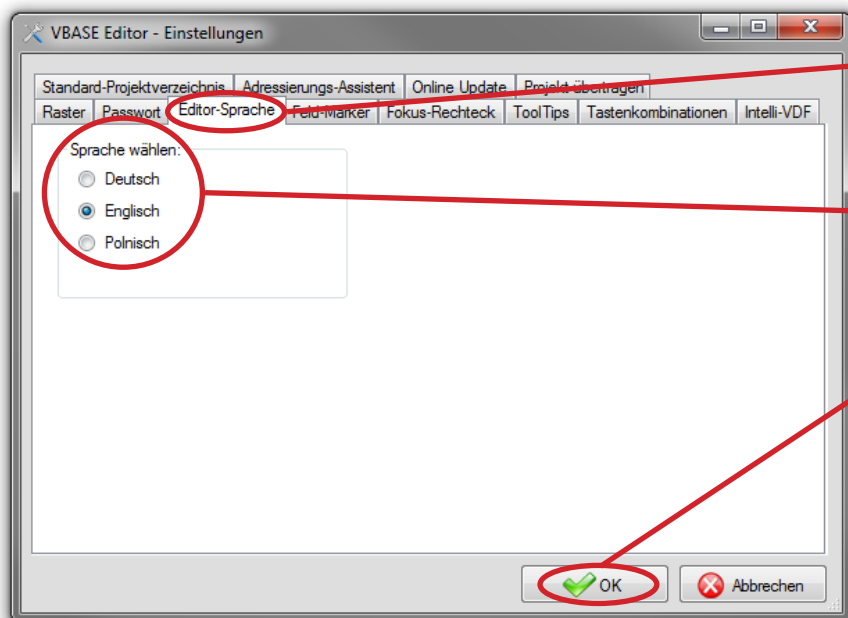


Choose „Editor-Sprache“ in the following preference window.

Choose your preferred language.

Click „OK“ to proceed.


The VBASE Editor needs to be restarted, in order that your new settings apply. Click „Yes“ to restart.

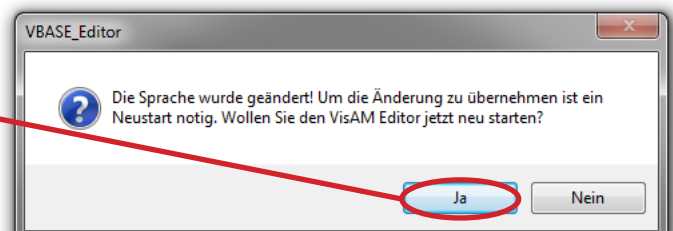


Step Three: Start VBASE Editor's online updater

VBASE HMI / SCADA is constantly evolving. Therefore we strongly recommend that you keep your system updated. Please refer to online update on a regular basis.

Please notice: Internet access is necessary for online update!

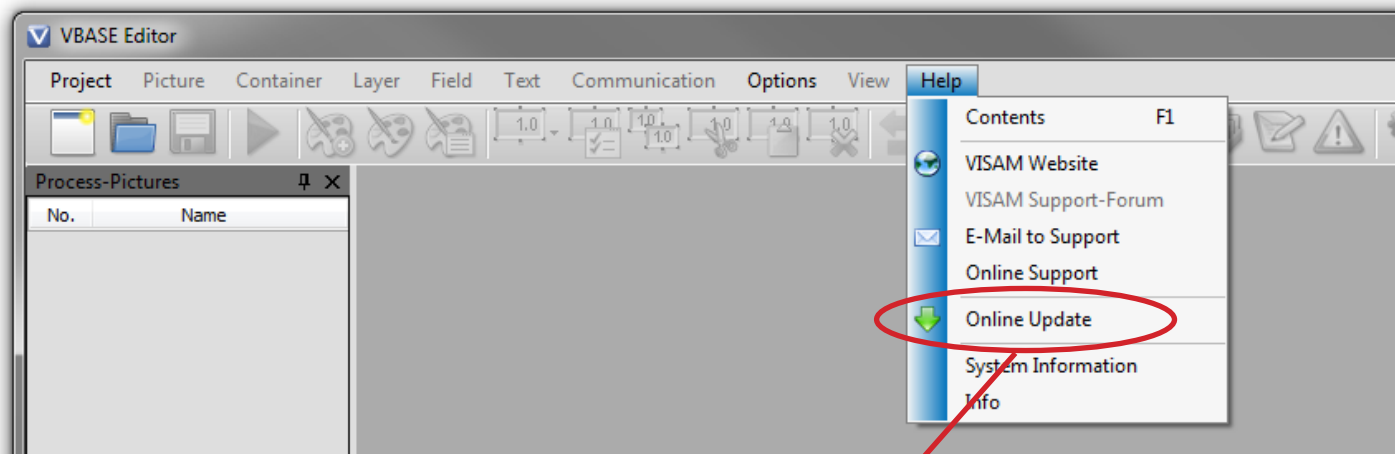

Navigate to „Help“ >> „Online Update“ through the menu bar at the top of the window.

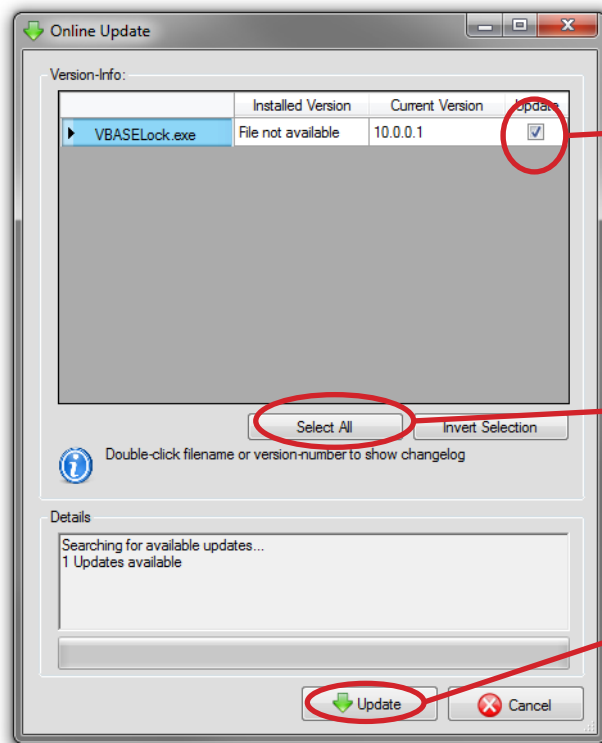

Select the files to be updated.

Or select all files.

Click „OK“ to proceed.

You're done! In some cases, the Editor needs to be restarted. Click „OK“ to proceed.

